

POWER PLANT - POWERPLANT - ENGINE - INCORPORATE REVISED CUSHION TYPE HARNESS CLIPPING
- CATEGORY CODE 7 - MOD.ENG-71-0067

1. Planning Information

A. Effectivity

- (1) Aircraft: Airbus A320
- (2) Engine: V2500-A1 Engines prior to Serial No.V0148

B. Concurrent Requirements

None

C. Reason

(1) Condition

Existing harness clamps have a rubber cushion that does not fully surround the steel band, this may cause chaffing by exposing the band edges to the harness.

(2) Background

Not applicable.

(3) Objective

To introduce a better standard of clamp to maintain engine reliability.

(4) Substantiation

Engine testing is not considered necessary. Satisfactory installation checks were carried out on the mock-up engine to verify replacement clamp size and clearances.


(5) Effect of Bulletin on Workshop Procedures

Removal/Installation	Not affected
Disassembly/Assembly	Not affected
Cleaning	Not affected
Inspection/Check	Not affected
Repair	Not affected
Testing	Not affected

(6) Supplemental Information

None

V2500-ENG-71-0067

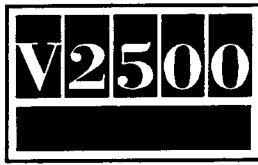**D. Description**

The changes introduced by this Service Bulletin are as follows:

- (1) The new clamps introduced by this bulletin incorporate a rubber cushion which fully surrounds the steel band and has a toothed surface which grips the harness and prevents chaffing.
- (2) Two versions of the saw tooth clamps are introduced as alternatives and are completely interchangeable.

E. Approval

The part number changes and or part modifications described in Section 2 and 3 of this Service Bulletin have been shown to comply with the applicable Federal Aviation Regulations and are FAA-APPROVED for the Engine Model listed.

F. Compliance

Category Code 7

Accomish when supply of superseded parts have been deleted.

G. Manpower

Estimated manhours to incorporate the full intent of this Bulletin:

Venue	Estimated Manhours
(1) In Service	Not applicable
(2) At Overhaul	Not affected

H. Material - Price and Availability

- (1) Modification Kit not required; Parts supplied as single line items.
- (2) See "Material Information" section for prices and availability of future spares.

I. Tooling - Price and Availability

Special tools are not required.

J. Weight and Balance

- | | |
|-------------------|--------------------------|
| (1) Weight change | Minus 2.8 lb (1,27 kg) |
| (2) Momemt arm | 8.0 in. (203 mm) forward |

V2500-ENG-71-0067



(3) Datum

Engine front mount centerline
(Power Plant Station(PPS)100)

K. Electrical Load Data

This Service Bulletin has no effect on the aircraft electrical load.

L. References

(1) Internal Reference No.

EC89VR027

EC89VR027A

EC89VR027B

EC89VR027C

EC89VR027D

(2) Other References

V2500 Engine Manual (E-V2500-1IA)

M. Other Publications Affected

(1) V2500 Illustrated Parts Catalog (S-V2500-1IA), Chapter/Section 24-21-43, 71-51-41, 71-51-42, 71-51-43, 71-51-44, 71-52-41, 71-52-42, 71-52-43, 77-32-15 and 77-32-43.



2. Accomplishment Instructions

A. Rework Instructions

There are no rework instructions necessary to accomplish this Service Bulletin.

B. Assembly Instructions

- (1) New loop style cushion clamps are fully interchangeable with in use clamps.
- (2) Assemble the new loop style cushion clamps to the relevant harness clipping point by use of approved procedures, refer to the Engine Manual.

C. Recording Instructions

- (1) A record of accomplishment is necessary.



SERVICE BULLETIN

3. Material Information

Applicability: For each V2500 Engine to incorporate this Bulletin.


A. Kits associated with this Bulletin:

None

B. Parts affected by this Bulletin:

New Part No. (ATA No.)	Qty	Est'd Unit Price (\$)	Keyword	Old Part No. (IPC No.)	Instructions Disposition
TA025074-18 (24-21-43)	6		Clamp, Loop Style, Cushion, CP0883, CP0884, CP0885, CP0886, CP0887, CP0888	JM44LC39S113 (01-129)	(A)(B) (S1)(S2)
AS61916 (24-21-43)	Ref		Clamp, Loop Style, Cushion, CP0883, CP0884, CP0885, CP0886, CP0887, CP0888	- (01-129)	(B)(S1) (S2)
TA025074-14 (71-51-41)	1		Clamp, Loop Style Cushion, CP0248	JM44LC39H110RG (01-129)	(A)(B) (S1)(S3)
AS61912 (71-51-41)	Ref		Clamp, Loop Style, Cushion, CP0248	- (01-129)	(B)(S1) (S3)
TA025074-14 (71-51-41)	1		Clamp, Loop Style, Cushion, CP0249	JM44LC39H110RG (01-137)	(A)(B) (S1)(S3)
AS61912 (71-51-41)	Ref		Clamp, Loop Style, Cushion, CP0249	- (01-137)	(B)(S1) (S3)
TA025074-14 (71-51-41)	1		Clamp, Loop Style, Cushion, CP0250	JM44LC39H110RG (01-145)	(A)(B) (S1)(S3)
AS61912 (71-51-41)	Ref		Clamp, Loop Style, Cushion, CP0250	- (01-145)	(B)(S1) (S3)
TA025074-14 (71-51-41)	1		Clamp, Loop Style, Cushion, CP0251	JM44LC39H110RG (01-153)	(A)(B) (S1)(S3)
AS61912 (71-51-41)	Ref		Clamp, Loop Style Cushion, CP0251	- (01-153)	(B)(S1) (S3)

V2500-ENG-71-0067

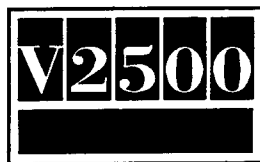

SERVICE BULLETIN

TA025074-14 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0252	JM44LC39H110RG (01-161)	(A)(B) (S1)(S3)
AS61912 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0252	- (01-161)	(B)(S1) (S3)
TA025074-14 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0254	JM44LC39H110RG (01-177)	(A)(B) (S1)(S3)
AS61912 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0254	- (01-177)	(B)(S1) (S3)
TA025074-14 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0256	JM44LC39H111RG (01-185)	(A)(B) (S1)(S3)
AS61912 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0256	- (01-185)	(B)(S1) (S3)
TA02574-10 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0257	JM44LC39H107RG (01-192)	(A)(B) (S1)(S4)
AS61908 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0257	- (01-192)	(B)(S1) (S4)
TA02574-14 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0257	JM44LC39H109RG (01-193)	(A)(B) (S1)(S5)
AS61912 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0257	- (01-193)	(B)(S1) (S5)
TA025074-10 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0258	JM44LC39H107RG (01-200)	(A)(B) (S1)(S4)
AS61908 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0258	- (01-200)	(B)(S1) (S4)
TA025074-14 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0258	JM44LC39H109RG (01-201)	(A)(B) (S1)(S5)
AS61912 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0258	- (01-201)	(B)(S1) (S5)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0259	JM44LC39H107RG (01-209)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0259	- (01-209)	(B)(S1) (S6)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0290	JM44LC39H107RG (01-249)	(A)(B) (S1)(S6)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61906	Ref	Clamp, Loop Style, Cushion, CP0290	- (01-249)	(B)(S1) (S6)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0291	JM44LC39H107RG (01-257)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0291	- (01-257)	(B)(S1) (S6)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0294	JM44LC39H105RG (01-265)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style Cushion, CP0294	- (01-265)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0295	JM44LC39H105RG (01-273)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0295	- (01-273)	(B)(S1) (S7)
TA025074-03 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0300	JM44LC39H102RG (01-281)	(A)(B) (S1)(S8)
AS61933 (71-51-41)	Ref	Clamp, Loop Style Cushion, CP0300	- (01-281)	(B)(S1) (S8)
TA025074-03 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0325	JM44LC39H102RG (01-297)	(A)(B) (S1)(S8)
AS61933 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0325	- (01-297)	(B)(S1) (S8)
TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0517	JM44LC39H111RG (01-353)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0517	- (01-353)	(B)(S1) (S9)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0529	JM44LC39H104RG (01-449)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0529	- (01-449)	(B)(S1) (S10)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0534	JM44LC39H112RG (01-481)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0534	- (01-481)	(B)(S1) (S11)

V2500-ENG-71-0067

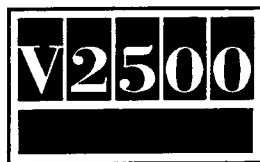

SERVICE BULLETIN

TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0539	JM44LC39H112RG (01-521)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0539	- (01-521)	(B)(S1) (S11)
TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0540	JM44LC39H110RG (01-529)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0540	- (01-529)	(B)(S1) (S9)
TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0541	JM44LC39H110RG (01-537)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0541	- (01-537)	(B)(S1) (S13)
TA025074-15 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0544	JM44LC39H110RG (01-561)	(A)(B) (S1)(S14)
AS61913 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0544	- (01-561)	(B)(S1) (S14)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0753	JM44LC39H105RG (01-617)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0753	- (01-617)	(B)(S1) (S7)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0754	JM44LC39H107RG (01-625)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0754	- (01-625)	(B)(S1) (S6)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0756	JM44LC39H107RG (01-633)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0756	- (01-633)	(B)(S1) (S6)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0761	JM44LC39H106RG (01-649)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0761	- (01-649)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0762	JM44LC39H106RG (01-657)	(A)(B) (S1)(S7)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0762	- (01-657)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0763	JM44LC39H106RG (01-665)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0763	- (01-665)	(B)(S1) (S7)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0764	JM44LC39H113RG (01-673)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0764	- (01-673)	(B)(S1) (S11)
TA025074-20 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0765	JM44LC39H113RG (01-681)	(A)(B) (S1)(S15)
AS61918 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0765	- (01-681)	(B)(S1) (S15)
TA025074-19 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0766	JM44LC39H112RG (01-689)	(A)(B) (S1)(S16)
AS61917 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0766	- (01-689)	(B)(S1) (S16)
TA025074-18 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0767	JM44LC39H112RG (01-697)	(A)(B) (S1)(S2)
AS61916 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0767	- (01-697)	(B)(S1) (S2)
TA025074-18 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0768	JM44LC39H113RG (01-705)	(A)(B) (S1)(S2)
AS61916 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0768	- (01-705)	(B)(S1) (S2)
TA025074-18 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0769	JM44LC39H113RG (01-713)	(A)(B) (S1)(S2)
AS61916 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0769	- (01-713)	(B)(S1) (S2)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0771	JM44LC39H105RG (01-729)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0771	- (01-729)	(B)(S1) (S7)

V2500-ENG-71-0067

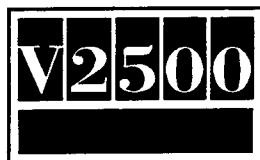

SERVICE BULLETIN

TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0772	JM44LC39H111RG (01-737)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0772	- (01-737)	(B)(S1) (S13)
TA025074-18 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0773	JM44LC39H112RG (01-745)	(A)(B) (S1)(S2)
AS61916 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0773	- (01-745)	(B)(S1) (S2)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0774	JM44LC39H112RG (01-753)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0774	- (01-753)	(B)(S1) (S11)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0775	JM44LC39H112RG (01-761)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0775	- (01-761)	(B)(S1) (S11)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0776	JM44LC39H104RG (01-769)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0776	- (01-769)	(B)(S1) (S10)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0777	JM44LC39H111RG (01-777)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0777	- (01-777)	(B)(S1) (S11)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0778	JM44LC39H110RG (01-784)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0778	- (01-784)	(B)(S1) (S11)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0778	JM44LC39H104RG (01-785)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0778	- (01-785)	(B)(S1) (S10)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0779	JM44LC39H111RG (01-793)	(A)(B) (S1)(S11)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0779	- (01-793)	(B)(S1) (S11)
TA025074-22 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0781	JM44LC39H117RG (01-809)	(A)(B) (S1)(S17)
AS61920 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0781	- (01-809)	(B)(S1) (S17)
TA025074-21 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0783	JM44LC39H113RG (01-825)	(A)(B) (S1)(S18)
AS61919 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0783	- (01-825)	(B)(S1) (S18)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0786	JM44LC39H113RG (01-849)	(A)(B) (S1)(S12)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0786	- (01-849)	(B)(S1) (S12)
TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0787	JM44LC39H113RG (01-857)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0787	- (01-857)	(B)(S1) (S13)
TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0788	JM44LC39H112RG (01-865)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0788	- (01-865)	(B)(S1) (S13)
TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0789	JM44LC39H112RG (01-873)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0789	- (01-873)	(B)(S1) (S13)
TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0790	JM44LC39H112RG (01-881)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0790	- (01-881)	(B)(S1) (S13)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0792	JM44LC39H103RG (01-897)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0792	- (01-897)	(B)(S1) (S10)

V2500-ENG-71-0067

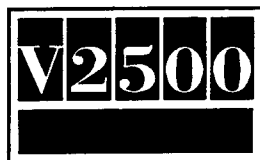

SERVICE BULLETIN

TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0796	JM44LC39H111RG (01-921)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0796	- (01-921)	(B)(S1) (S9)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0796	JM44LC39H107RG (01-922)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0796	- (01-922)	(B)(S1) (S7)
TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0797	JM44LC39H111RG (01-928)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0797	- (01-928)	(B)(S1) (S9)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0797	JM44LC39H107RG (01-929)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0797	- (01-929)	(B)(S1) (S7)
TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0798	JM44LC39H111RG (01-936)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0798	- (01-936)	(B)(S1) (S9)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0798	JM44LC39H107RG (01-937)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0798	- (01-937)	(B)(S1) (S7)
TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0799	JM44LC39H111RG (01-944)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0799	- (01-944)	(B)(S1) (S9)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0799	JM44LC39H107RG (01-945)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0799	- (01-945)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1000	JM44LC39H107RG (01-952)	(A)(B) (S1)(S7)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1000	- (01-952)	(B)(S1) (S7)
TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1000	JM44LC39H111RG (01-953)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1000	- (01-953)	(B)(S1) (S9)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1001	JM44LC39H104RG (01-961)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1001	- (01-961)	(B)(S1) (S10)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1002	JM44LC39H104RG (01-969)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1002	- (01-969)	(B)(S1) (S10)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1003	JM44LC39H104RG (01-977)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1003	- (01-977)	(B)(S1) (S10)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1004	JM44LC39H104RG (01-985)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1004	- (01-985)	(B)(S1) (S10)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1005	JM44LC39H107RG (01-992)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1005	- (01-992)	(B)(S1) (S7)
TA025074-13 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1005	JM44LC39H111RG (01-993)	(A)(B) (S1)(S9)
AS61911 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1005	- (01-993)	(B)(S1) (S9)
TA025074-12 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1006	JM44LC39H109RG (02-010)	(A)(B) (S1)(S19)
AS61910 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1006	- (02-010)	(B)(S1) (S19)

V2500-ENG-71-0067

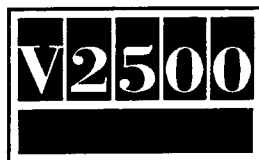

SERVICE BULLETIN

TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1008	JM44LC39H104RG (02-026)	(A)(B) (S1)(S10)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1008	- (02-026)	(B)(S1) (S10)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1009	JM44LC39H103RG (02-033)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1009	- (02-033)	(B)(S1) (S10)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1009	JM44LC39H107RG (02-034)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1009	- (02-034)	(B)(S1) (S6)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1010	JM44LC39H107RG (02-042)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1010	- (02-042)	(B)(S1) (S6)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1011	JM44LC39H107RG (02-050)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1011	- (02-050)	(B)(S1) (S6)
TA025074-12 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1012	JM44LC39H109RG (02-058)	(A)(B) (S1)(S9)
AS61910 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1012	- (02-058)	(B)(S1) (S1)
TA025074-12 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1014	JM44LC39H109RG (02-074)	(A)(B) (S1)(S19)
AS61910 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1014	- (02-074)	(B)(S1) (S19)
TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1015	JM44LC39H104RG (02-082)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1015	- (02-082)	(B)(S1) (S10)
TA025074-18 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1017	JM44LC39H112RG (02-090)	(A)(B) (S1)(S2)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61916 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1017	- (02-090)	(B)(S1) (S2)
TA025074-15 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1019	JM44LC39H110RG (02-106)	(A)(B) (S1)(S14)
AS61913 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1019	- (02-106)	(B)(S1) (S14)
TA025074-15 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1020	JM44LC39H110RG (02-114)	(A)(B) (S1)(S14)
AS61913 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1020	- (02-114)	(B)(S1) (S14)
TA025074-05 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1021	JM44LC39H105RG (02-122)	(A)(B) (S1)(S20)
AS61903 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1021	- (02-122)	(B)(S1) (S20)
TA025074-03 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1022	JM44LC39H103RG (02-129)	(A)(B) (S1)(S8)
AS61933 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1022	- (02-129)	(B)(S1) (S8)
TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1022	JM44LC39H112RG (02-130)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1022	- (02-130)	(B)(S1) (S13)
TA025074-16 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1023	JM44LC39H112RG (02-138)	(A)(B) (S1)(S13)
AS61914 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1023	- (02-138)	(B)(S1) (S13)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1032	JM44LC39H105RG (02-146)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1032	- (02-146)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1033	JM44LC39H105RG (02-154)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1033	- (02-154)	(B)(S1) (S7)

V2500-ENG-71-0067

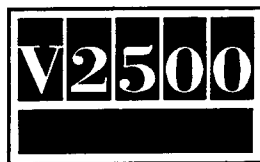

SERVICE BULLETIN

TA025074-04 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1034	JM44LC39H104RG (02-162)	(A)(B) (S1)(S10)
AS61902 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1034	- (02-162)	(B)(S1) (S10)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1043	JM44LC39H106RG (02-178)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1043	- (02-178)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1044	JM44LC39H106RG (02-186)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1044	- (02-186)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1046	JM44LC39H106RG (02-202)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1046	- (02-202)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1048	JM44LC39H106RG (02-218)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1048	- (02-218)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1070	JM44LC39H105RG (02-264)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1070	- (02-264)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1071	JM44LC39H105RG (02-272)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1071	- (02-272)	(B)(S1) (S7)
TA025074-07 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1075	JM44LC39H107RG (02-280)	(A)(B) (S1)(S21)
AS61905 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1075	- (02-280)	(B)(S1) (S21)
TA025074-07 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1076	JM44LC39H107RG (02-288)	(A)(B) (S1)(S21)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61905 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1076	- (02-288)	(B)(S1) (S21)
TA025074-22 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1077	JM44LC39H117RG (02-296)	(A)(B) (S1)(S17)
AS61920 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1077	- (02-296)	(B)(S1) (S17)
TA025074-01 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1081	JM44LC39H103RG (02-304)	(A)(B) (S1)(S22)
AS61931 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1081	- (02-304)	(B)(S1) (S22)
TA025074-18 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1084	JM44LC39H113RG (02-312)	(A)(B) (S1)(S2)
AS61916 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1084	- (02-312)	(B)(S1) (S2)
TA025074-18 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1085	JM44LC39H113RG (02-320)	(A)(B) (S1)(S2)
AS61916 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1085	- (02-320)	(B)(S1) (S2)
TA025074-15 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1086	JM44LC39H110RG (02-336)	(A)(B) (S1)(S14)
AS61913 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1086	- (02-336)	(B)(S1) (S14)
TA025074-15 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1088	JM44LC39H110RG (02-344)	(A)(B) (S1)(S14)
AS61913 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1088	- (02-344)	(B)(S1) (S14)
TA025074-08 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0922	JM44LC39H107RG (02-376)	(A)(B) (S1)(S6)
AS61906 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0922	- (02-376)	(B)(S1) (S6)
TA025074-17 (71-51-41)	1	Clamp, Loop Style, Cushion, CP0887	JM44LC39H112RG (02-384)	(A)(B) (S1)(S11)
AS61915 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP0887	- (02-384)	(B)(S1) (S11)

V2500-ENG-71-0067

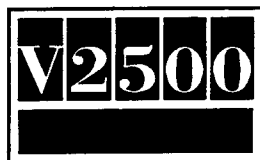

SERVICE BULLETIN

TA025074-12 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1092	JM44LC39H109RG (02-392)	(A)(B) (S1)(S19)
AS61910 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1092	- (02-392)	(B)(S1) (S19)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1095	JM44LC39H106RG (02-400)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1095	- (02-400)	(B)(S1) (S7)
TA025074-06 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1097	JM44LC39H105RG (02-416)	(A)(B) (S1)(S7)
AS61904 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1097	- (02-416)	(B)(S1) (S7)
TA025074-19 (71-51-41)	1	Clamp, Loop Style, Cushion, CP1096	JM44LC39H114RG (02-424)	(A)(B) (S1)(S16)
AS61917 (71-51-41)	Ref	Clamp, Loop Style, Cushion, CP1096	- (02-424)	(B)(S1) (S16)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0800	JM44LC39H109RG (01-041)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0800	- (01-041)	(B)(S1) (S19)
TA025074-16 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0801	JM44LC39H111RG (01-049)	(A)(B) (S1)(S13)
AS61914 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0801	- (01-049)	(B)(S1) (S13)
TA025074-09 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0802	JM44LC39H106RG (01-057)	(A)(B) (S1)(S23)
AS61907 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0802	- (01-057)	(B)(S1) (S23)
TA025074-05 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0803	JM44LC39H106RG (01-064)	(A)(B) (S1)(S20)
AS61903 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0803	- (01-064)	(B)(S1) (S20)
TA025074-11 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0803	JM44LC39H107RG (01-065)	(A)(B) (S1)(S12)

Printed in Great Britain

V2500-ENG-71-0067



SERVICE BULLETIN

Printed in Great Britain

AS61909 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0803	- (01-065)	(B)(S1) (S12)
TA025074-11 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0804	JM44LC39H107RG (01-073)	(A)(B) (S1)(S12)
AS61909 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0804	- (01-073)	(B)(S1) (S12)
TA025074-10 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0807	JM44LC39H107RG (01-081)	(A)(B) (S1)(S4)
AS61908 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0807	- (01-081)	(B)(S1) (S4)
TA025074-03 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0808	JM44LC39H104RG (01-089)	(A)(B) (S1)(S8)
AS61933 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0808	- (01-089)	(B)(S1) (S8)
TA025074-03 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0809	JM44LC39H104RG (01-097)	(A)(B) (S1)(S8)
AS61933 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0809	- (01-097)	(B)(S1) (S8)
TA025074-10 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0810	JM44LC39H108RG (01-105)	(A)(B) (S1)(S4)
AS61908 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0810	- (01-105)	(B)(S1) (S4)
TA025074-06 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0811	JM44LC39H106RG (01-112)	(A)(B) (S1)(S7)
AS61904 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0811	- (01-112)	(B)(S1) (S7)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0812	JM44LC39H109RG (01-121)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0812	- (01-121)	(B)(S1) (S19)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0813	JM44LC39H109RG (01-129)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0813	- (01-129)	(B)(S1) (S19)

V2500-ENG-71-0067



SERVICE BULLETIN

TA025074-07 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0814	JM44LC39H106RG (01-137)	(A)(B) (S1)(S21)
AS61905 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0814	- (01-137)	(B)(S1) (S21)
TA025074-11 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0815	JM44LC39H108RG (01-145)	(A)(B) (S1)(S12)
AS61909 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0815	- (01-145)	(B)(S1) (S12)
TA025074-11 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0816	JM44LC39H108RG (01-153)	(A)(B) (S1)(S12)
AS61909 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0816	- (01-153)	(B)(S1) (S12)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0817	JM44LC39H109RG (01-161)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0817	- (01-161)	(B)(S1) (S19)
TA025074-05 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0818	JM44LC39H103RG (01-168)	(A)(B) (S1)(S20)
AS61903 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0818	- (01-168)	(B)(S1) (S20)
TA025074-11 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0818	JM44LC39H108RG (01-169)	(A)(B) (S1)(S12)
AS61909 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0818	- (01-169)	(B)(S1) (S12)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0819	JM44LC39H109RG (01-177)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0819	- (01-177)	(B)(S1) (S19)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0820	JM44LC39H103RG (01-185)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0820	- (01-185)	(B)(S1) (S10)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0821	JM44LC39H103RG (01-193)	(A)(B) (S1)(S10)

Printed in Great Britain

V2500-ENG-71-0067



SERVICE BULLETIN

Printed in Great Britain

AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0821	- (01-193)	(B)(S1) (S10)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0822	JM44LC39H103RG (01-201)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0822	- (01-201)	(B)(S1) (S10)
TA025074-10 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0823	JM44LC39H107RG (01-209)	(A)(B) (S1)(S4)
AS61908 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0823	- (01-209)	(B)(S1) (S4)
TA025074-11 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0861	JM44LC39H108RG (01-241)	(A)(B) (S1)(S12)
AS61909 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0861	- (01-241)	(B)(S1) (S12)
TA025074-11 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0862	JM44LC39H108RG (01-249)	(A)(B) (S1)(S12)
AS61909 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0862	- (01-249)	(B)(S1) (S12)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0863	JM44LC39H106RG (01-257)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0863	- (01-257)	(B)(S1) (S10)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0864	JM44LC39H103RG (01-265)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0864	- (01-265)	(B)(S1) (S10)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0865	JM44LC39H103RG (01-273)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0865	- (01-273)	(B)(S1) (S10)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0866	JM44LC39H103RG (01-281)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0866	- (01-281)	(B)(S1) (S10)

V2500-ENG-71-0067



SERVICE BULLETIN

TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0867	JM44LC39H103RG (01-289)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0867	- (01-289)	(B)(S1) (S10)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0868	JM44LC39H103RG (01-297)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0868	- (01-297)	(B)(S1) (S10)
TA025074-04 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0869	JM44LC39H103RG (01-305)	(A)(B) (S1)(S10)
AS61902 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0869	- (01-305)	(B)(S1) (S10)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0764	JM44LC39H109RG (01-313)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0764	- (01-313)	(B)(S1) (S19)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0765	JM44LC39H109RG (01-321)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0765	- (01-321)	(B)(S1) (S19)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0766	JM44LC39H109RG (01-329)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0766	- (01-329)	(B)(S1) (S19)
TA025074-12 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0767	JM44LC39H109RG (01-337)	(A)(B) (S1)(S19)
AS61910 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0767	- (01-337)	(B)(S1) (S19)
TA025074-10 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0896	JM44LC39H107RG (01-353)	(A)(B) (S1)(S4)
AS61908 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0896	- (01-353)	(B)(S1) (S4)
TA025074-10 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0897	JM44LC39H107RG (01-361)	(A)(B) (S1)(S4)

Printed in Great Britain

V2500-ENG-71-0067



SERVICE BULLETIN

Printed in Great Britain

AS61908 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0897	- (01-361)	(B)(S1) (S4)
TA025074-10 (71-51-42)	1	Clamp, Loop Style, Cushion, CP1075	JM44LC39H107RG (01-369)	(A)(B) (S1)(S4)
AS61908 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP1075	- (01-369)	(B)(S1) (S4)
TA025074-19 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0898	JM44LC39H114RG (01-377)	(A)(B) (S1)(S16)
AS61917 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0898	- (01-377)	(B)(S1) (S16)
TA025074-07 (71-51-42)	1	Clamp, Loop Style, Cushion, CP0890	JM44LC39H105RG (05-128)	(A)(B) (S1)(S21)
AS61905 (71-51-42)	Ref	Clamp, Loop Style, Cushion, CP0890	- (05-128)	(B)(S1) (S21)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0554	JM44LC39H107RG (01-041)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0554	- (01-041)	(B)(S1) (S4)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0805	JM44LC39H107RG (01-049)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0805	- (01-049)	(B)(S1) (S4)
TA025074-05 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0806	JM44LC39H104RG (01-057)	(A)(B) (S1)(S20)
AS61903 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0806	- (01-057)	(B)(S1) (S20)
TA025074-07 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0812	JM44LC39H106RG (01-065)	(A)(B) (S1)(S21)
AS61905 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0812	- (01-065)	(B)(S1) (S21)
TA025074-07 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0813	JM44LC39H106RG (01-073)	(A)(B) (S1)(S21)
AS61905 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0813	- (01-073)	(B)(S1) (S21)

V2500-ENG-71-0067



SERVICE BULLETIN

TA025074-12 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0814	JM44LC39H109RG (01-081)	(A)(B) (S1)(S19)
AS61910 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0814	- (01-081)	(B)(S1) (S19)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0827	JM44LC39H102RG (01-089)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0827	- (01-089)	(B)(S1) (S10)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0828	JM44LC39H102RG (01-097)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0828	- (01-097)	(B)(S1) (S10)
TA025074-07 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0829	JM44LC39H105RG (01-105)	(A)(B) (S1)(S21)
AS61905 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0829	- (01-105)	(B)(S1) (S21)
TA025074-01 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0829	JM44LC39H102RG (01-113)	(A)(B) (S1)(S22)
AS61931 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0829	- (01-113)	(B)(S1) (S22)
TA025074-05 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0831	JM44LC39H105RG (01-121)	(A)(B) (S1)(S20)
AS61903 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0831	- (01-121)	(B)(S1) (S20)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0832	JM44LC39H104RG (01-129)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0832	- (01-129)	(B)(S1) (S10)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0833	JM44LC39H102RG (01-137)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0833	- (01-137)	(B)(S1) (S10)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0834	JM44LC39H102RG (01-145)	(A)(B) (S1)(S10)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0834	- (01-145)	(B)(S1) (S10)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0835	JM44LC39H102RG (01-153)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0835	- (01-153)	(B)(S1) (S10)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0838	JM44LC39H107RG (01-161)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0838	- (01-161)	(B)(S1) (S4)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0839	JM44LC39H107RG (01-169)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0839	- (01-169)	(B)(S1) (S4)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0840	JM44LC39H107RG (01-177)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0840	- (01-177)	(B)(S1) (S4)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0841	JM44LC39H107RG (01-185)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0841	- (01-185)	(B)(S1) (S4)
TA025074-17 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0845	JM44LC39H112RG (01-217)	(A)(B) (S1)(S11)
AS61915 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0845	- (01-217)	(B)(S1) (S11)
TA025074-17 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0846	JM44LC39H112RG (01-225)	(A)(B) (S1)(S11)
AS61915 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0846	- (01-225)	(B)(S1) (S11)
TA025074-05 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0847	JM44LC39H103RG (01-233)	(A)(B) (S1)(S20)
AS61903 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0847	- (01-233)	(B)(S1) (S20)

V2500-ENG-71-0067

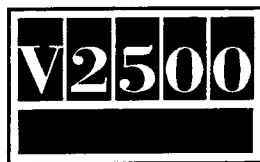

SERVICE BULLETIN

TA025074-03 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0848	JM44LC39H102RG (01-241)	(A)(B) (S1)(S8)
AS61933 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0848	- (01-241)	(B)(S1) (S8)
TA025074-06 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0849	JM44LC39H105RG (01-249)	(A)(B) (S1)(S7)
AS61904 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0849	- (01-249)	(B)(S1) (S7)
TA025074-01 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0850	JM44LC39H101RG (01-257)	(A)(B) (S1)(S22)
AS61931 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0850	- (01-257)	(B)(S1) (S22)
TA025074-07 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0851	JM44LC39H105RG (01-265)	(A)(B) (S1)(S21)
AS61905 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0851	- (01-265)	(B)(S1) (S21)
TA025074-07 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0852	JM44LC39H105RG (01-273)	(A)(B) (S1)(S21)
AS61905 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0852	- (01-273)	(B)(S1) (S21)
TA025074-09 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0853	JM44LC39H106RG (01-281)	(A)(B) (S1)(S23)
AS61907 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0853	- (01-281)	(B)(S1) (S23)
TA025074-01 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0854	JM44LC39H101RG (01-289)	(A)(B) (S1)(S22)
AS61931 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0854	- (01-289)	(B)(S1) (S22)
TA025074-03 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0855	JM44LC39H102RG (01-297)	(A)(B) (S1)(S8)
AS61933 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0855	- (01-297)	(B)(S1) (S8)
TA025074-08 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0856	JM44LC39H106RG (01-305)	(A)(B) (S1)(S6)

Printed in Great Britain

V2500-ENG-71-0067



SERVICE BULLETIN

Printed in Great Britain

AS61906 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0856	- (01-305)	(B)(S1) (S6)
TA025074-08 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0857	JM44LC39H106RG (01-313)	(A)(B) (S1)(S6)
AS61906 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0857	- (01-313)	(B)(S1) (S6)
TA025074-08 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0858	JM44LC39H106RG (01-321)	(A)(B) (S1)(S6)
AS61906 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0858	- (01-321)	(B)(S1) (S6)
TA025074-08 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0859	JM44LC39H106RG (01-329)	(A)(B) (S1)(S6)
AS61906 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0859	- (01-329)	(B)(S1) (S6)
TA025074-08 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0860	JM44LC39H106RG (01-337)	(A)(B) (S1)(S6)
AS61906 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0860	- (01-337)	(B)(S1) (S6)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0861	JM44LC39H104RG (01-345)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0861	- (01-345)	(A)(B) (S10)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0862	JM44LC39H104RG (01-353)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0862	- (01-353)	(B)(S1) (S10)
TA025074-03 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0881	JM44LC39H102RG (01-361)	(A)(B) (S1)(S8)
AS61933 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0881	- (01-361)	(B)(S1) (S8)
TA025074-03 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0903	JM44LC39H102RG (01-369)	(A)(B) (S1)(S8)
AS61933 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0903	- (01-369)	(B)(S1) (S8)

V2500-ENG-71-0067



SERVICE BULLETIN

TA025074-12 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0768	JM44LC39H108RG (01-377)	(A)(B) (S1)(S19)
AS61910 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0768	- (01-377)	(B)(S1) (S19)
TA025074-12 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0769	JM44LC39H108RG (01-385)	(A)(B) (S1)(S19)
AS61910 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0769	- (01-385)	(B)(S1) (S19)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0771	JM44LC39H107RG (01-401)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0771	- (01-401)	(B)(S1) (S4)
TA025074-08 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0772	JM44LC39H105RG (01-409)	(A)(B) (S1)(S6)
AS61906 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0772	- (01-409)	(B)(S1) (S6)
TA025074-16 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0892	JM44LC39H111RG (01-416)	(A)(B) (S1)(S13)
AS61914 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0892	- (01-416)	(B)(S1) (S13)
TA025074-04 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0892	JM44LC39H102RG (01-417)	(A)(B) (S1)(S10)
AS61902 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0892	- (01-417)	(B)(S1) (S10)
TA025074-02 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0791	JM44LC39H103RG (01-433)	(A)(B) (S1)(S24)
AS61932 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0791	- (01-433)	(B)(S1) (S24)
TA025074-10 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0792	JM44LC39H107RG (01-441)	(A)(B) (S1)(S4)
AS61908 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0792	- (01-441)	(B)(S1) (S4)
TA025074-18 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0894	JM44LC39H112RG (01-448)	(A)(B) (S1)(S2)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61916 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0894	- (01-448)	(B)(S1) (S2)
TA025074-11 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0894	JM44LC39H108RG (01-449)	(A)(B) (S1)(S12)
AS61909 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0894	- (01-449)	(B)(S1) (S12)
TA025074-18 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0895	JM44LC39H112RG (01-456)	(A)(B) (S1)(S2)
AS61916 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0895	- (01-456)	(B)(S1) (S2)
TA025074-11 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0895	JM44LC39H108RG (01-457)	(A)(B) (S1)(S12)
AS61909 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0895	- (01-457)	(B)(S1) (S12)
TA025074-02 (71-51-43)	1	Clamp, Loop Style, Cushion, CP0895	JM44LC39H103RG (01-473)	(A)(B) (S1)(S24)
AS61932 (71-51-43)	Ref	Clamp, Loop Style, Cushion, CP0895	- (01-473)	(B)(S1) (S24)
TA025074-03 (71-51-44)	1	Clamp, Loop Style, Cushion, CP0545	JM44LC39H102RG (01-073)	(A)(B) (S1)(S8)
AS61933 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP0545	- (01-073)	(B)(S1) (S8)
TA025074-03 (71-51-44)	1	Clamp, Loop Style, Cushion, CP0568	JM44LC39H102RG (01-081)	(A)(B) (S1)(S8)
AS61933 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP0568	- (01-081)	(B)(S1) (S8)
TA025074-03 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5557	JM44LC39H102RG (01-089)	(A)(B) (S1)(S8)
AS61933 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5557	- (01-089)	(B)(S1) (S8)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5595	JM44LC39H101RG (01-097)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5595	- (01-097)	(B)(S1) (S22)

V2500-ENG-71-0067

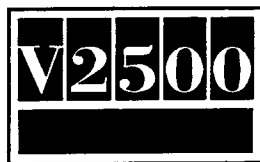

SERVICE BULLETIN

TA025074-04 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5654	JM44LC39H104RG (01-105)	(A)(B) (S1)(S10)
AS61902 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5654	- (01-105)	(B)(S1) (S10)
TA025074-04 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5671	JM44LC39H104RG (01-113)	(A)(B) (S1)(S10)
AS61902 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5671	- (01-113)	(B)(S1) (S10)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5675	JM44LC39H101RG (01-121)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5675	- (01-121)	(B)(S1) (S22)
TA025074-03 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5695	JM44LC39H102RG (01-129)	(A)(B) (S1)(S8)
AS61933 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5695	- (01-129)	(B)(S1) (S8)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5696	JM44LC39H101RG (01-137)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5696	- (01-137)	(B)(S1) (S22)
TA025074-09 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5713	JM44LC39H107RG (01-153)	(A)(B) (S1)(S23)
AS61907 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5713	- (01-153)	(B)(S1) (S23)
TA025074-09 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5714	JM44LC39H107RG (01-161)	(A)(B) (S1)(S23)
AS61907 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5714	- (01-161)	(B)(S1) (S23)
TA025074-04 (71-51-44)	1	Clamp, Loop Style, Cushion, CP0207	JM44LC39H103RG (01-177)	(A)(B) (S1)(S10)
AS61902 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP0207	- (01-177)	(B)(S1) (S10)
TA025074-04 (71-51-44)	1	Clamp, Loop Style, Cushion, CP0550	JM44LC39H103RG (01-185)	(A)(B) (S1)

Printed in Great Britain

V2500-ENG-71-0067



SERVICE BULLETIN

Printed in Great Britain

AS61902 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP0550	- (01-185)	(B)(S1)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP1007	JM44LC39H102RG (01-193)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP1007	- (01-193)	(B)(S1) (S22)
TA025074-02 (71-51-44)	1	Clamp, Loop Style, Cushion, CP0791	JM44LC39H101RG (01-225)	(A)(B) (S1)(S24)
AS61932 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP0791	- (01-225)	(B)(S1) (S24)
TA025074-03 (71-51-44)	1	Clamp, Loop Style, Cushion, CP5772	JM44LC39H102RG (01-233)	(A)(B) (S1)(S8)
AS61933 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP5772	- (01-233)	(B)(S1) (S8)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP0541	JM44LC39H101RG (01-241)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP0541	- (01-241)	(B)(S1) (S22)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP1089	JM44LC39H102RG (01-249)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP1089	- (01-249)	(B)(S1) (S22)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP1090	JM44LC39H102RG (01-257)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP1090	- (01-257)	(B)(S1) (S22)
TA025074-01 (71-51-44)	1	Clamp, Loop Style, Cushion, CP1091	JM44LC39H102RG (01-265)	(A)(B) (S1)(S22)
AS61931 (71-51-44)	Ref	Clamp, Loop Style, Cushion, CP1091	- (01-265)	(B)(S1) (S22)
TA025074-04 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5915	TA025017FT06 (01-042)	(A)(B) (S1)(S10)
AS61902 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5915	- (01-042)	(B)(S1) (S10)

V2500-ENG-71-0067



SERVICE BULLETIN

TA025074-04	1	Cushion, CP5914	(01-048)	(S1)(S10)
AS61902 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5914	- (01-048)	(B)(S1) (S10)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5913	TA027000PH03WC (01-054)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5913	- (01-054)	(B)(S1) (S20)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5913	TA027000PH07WC (01-056)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5913	- (01-056)	(B)(S1) (S20)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5911	TA027000PH07WC (01-072)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5911	- (01-072)	(B)(S1) (S20)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5910	TA027000PH05WC (01-083)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5910	- (01-083)	(B)(S1) (S8)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5909	TA027000PH07WC (01-091)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5909	- (01-091)	(B)(S1) (S20)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5908	TA027000PH07WC (01-099)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5908	- (01-099)	(B)(S1) (S20)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5907	TA027000PH07WC (01-107)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5907	- (01-107)	(B)(S1) (S20)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5764	TA027000PH07WC (01-109)	(A)(B) (S1)(S20)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5764	- (01-109)	(B)(S1) (S20)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5905	TA027000PH07WC (01-115)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5905	- (01-115)	(B)(S1) (S20)
TA025074-01 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5808	TA027000PH02WC (01-122)	(A)(B) (S1)(S22)
AS61931 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5808	- (01-122)	(B)(S1) (S22)
TA025074-04 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5904	TA027000PH05WC (01-123)	(A)(B) (S1)(S10)
AS61902 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5904	- (01-123)	(B)(S1) (S10)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5767	TA027000PH03WC (01-131)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5767	- (01-131)	(B)(S1) (S8)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5901	TA027000PH03WC (01-139)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5901	- (01-139)	(B)(S1) (S8)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5804	JM44LC39H103RG (01-145)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5804	- (01-145)	(B)(S1) (S8)
TA025074-04 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5671	TA027000PH03WC (01-148)	(A)(B) (S1)(S10)
AS61902 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5671	- (01-148)	(B)(S1) (S10)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5821	TA027000PH03WC (01-155)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5821	- (01-155)	(B)(S1) (S8)

V2500-ENG-71-0067

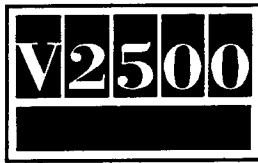

SERVICE BULLETIN

TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5820	TA027000PH03WC (01-163)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5920	- (01-163)	(B)(S1) (S8)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5801	TA027000PH03WC (01-171)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5801	- (01-171)	(B)(S1) (S8)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5800	TA027000PH03WC (01-179)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5800	- (01-179)	(B)(S1) (S8)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5902	TA027000PH05WC (01-188)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5902	- (01-188)	(B)(S1) (S8)
TA025074-03 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5903	TA027000PH05WC (01-197)	(A)(B) (S1)(S8)
AS61933 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5903	- (01-197)	(B)(S1) (S8)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5763	TA027000PH07WC (01-200)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5763	- (01-200)	(B)(S1) (S20)
TA025074-05 (71-52-41)	1	Clamp, Loop Style, Cushion, CP5906	TA027000PH07WC (01-210)	(A)(B) (S1)(S20)
AS61903 (71-52-41)	Ref	Clamp, Loop Style, Cushion, CP5906	- (01-210)	(B)(S1) (S20)
TA025074-03 (71-52-42)	1	Clamp, Loop Style, Cushion, CP5817	TA027000PH02WC (01-043)	(A)(B) (S1)(S8)
AS61933 (71-52-42)	Ref	Clamp, Loop Style, Cushion, CP5817	- (01-043)	(B)(S1) (S8)
TA025074-03 (71-52-42)	1	Clamp, Loop Style, Cushion, CP5840	TA027000PH03WC (01-051)	(A)(B) (S1)(S8)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61933 (71-52-42)	Ref	Clamp, Loop Style, Cushion, CP5840	- (01-051)	(B)(S1) (S8)
TA025074-04 (71-52-42)	1	Clamp, Loop Style, Cushion, CP5750	TA027000PH03WC (01-055)	(A)(B) (S1)(S10)
AS61902 (71-52-42)	Ref	Clamp, Loop Style, Cushion, CP5750	- (01-055)	(B)(S1) (S10)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5560	JM44LC39H106RG (01-057)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5560	- (01-057)	(B)(S1) (S21)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5660	JM44LC39H106RG (01-073)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5660	- (01-073)	(B)(S1) (S21)
TA025074-16 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5678	JM44LC30H113RG (01-113)	(A)(B) (S1)(S13)
AS61914 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5678	- (01-113)	(B)(S1) (S13)
TA025074-01 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5679	JM44LC39H101RG (01-120)	(A)(B) (S1)(S22)
AS61931 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5679	- (01-120)	(B)(S1) (S22)
TA025074-17 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5679	JM44LC39H113RG (01-121)	(A)(B) (S1)(S11)
AS61915 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5679	- (01-121)	(B)(S1) (S11)
TA025074-01 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5688	JM44LC39H101RG (01-193)	(A)(B) (S1)(S22)
AS61931 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5688	- (01-193)	(B)(S1) (S22)
TA025074-01 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5689	JM44LC39H101RG (01-201)	(A)(B) (S1)(S22)
AS61931 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5689	- (01-201)	(B)(S1) (S22)

V2500-ENG-71-0067

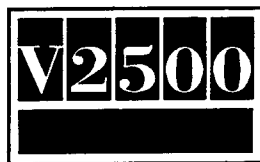

SERVICE BULLETIN

TA025074-04 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5690	JM44LC39H101RG (01-209)	(A)(B) (S1)(S10)
AS61902 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5690	- (01-209)	(B)(S1) (S10)
TA025074-12 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5691	JM44LC39H110RG (01-217)	(A)(B) (S1)(S19)
AS61910 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5691	- (01-217)	(B)(S1) (S19)
TA025074-12 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5692	JM44LC30H110RG (01-225)	(A)(B) (S1)(S19)
AS61910 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5692	- (01-225)	(B)(S1) (S19)
TA025074-09 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5693	JM44LC39H110RG (01-233)	(A)(B) (S1)(S23)
AS61907 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5693	- (01-233)	(B)(S1) (S23)
TA025074-09 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5694	JM44LC39H107RG (01-241)	(A)(B) (S1)(S23)
AS61907 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5694	- (01-241)	(B)(S1) (S23)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5711	JM44LC39H106RG (01-265)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5711	- (01-265)	(B)(S1) (S21)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5712	JM44LC39H106RG (01-273)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5712	- (01-273)	(B)(S1) (S21)
TA025074-08 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5725	JM44LC39H107RG (01-305)	(A)(B) (S1)(S6)
AS61906 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5725	- (01-305)	(B)(S1) (S6)
TA025074-06 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5732	JM44LC39H103RG (01-313)	(A)(B) (S1)(S7)

Printed in Great Britain

V2500-ENG-71-0067



SERVICE BULLETIN

Printed in Great Britain

AS61904 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5732	- (01-313)	(B)(S1) (S7)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5733	JM44LC30H103RG (01-321)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5733	- (01-321)	(B)(S1) (S21)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5744	JM44LC39H106RG (01-361)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5744	- (01-361)	(B)(S1) (S21)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5745	JM44LC39H107RG (01-369)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5745	- (01-369)	(B)(S1) (S21)
TA025074-05 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5751	JM44LC39H105RG (01-377)	(A)(B) (S1)(S20)
AS61903 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5751	- (01-377)	(B)(S1) (S20)
TA025074-04 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5750	JM44LC39H104RG (01-385)	(A)(B) (S1)
AS61902 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5750	- (01-385)	(B)(S1)
TA025074-09 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5740	JM44LC39H108RG (01-393)	(A)(B) (S1)(S23)
AS61907 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5740	- (01-393)	(B)(S1) (S23)
TA025074-09 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5741	JM44LC39H108RG (01-401)	(A)(B) (S1)(S23)
AS61907 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5741	- (01-401)	(B)(S1) (S23)
TA025074-09 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5742	JM44LC30H108RG (01-409)	(A)(B) (S1)(S23)
AS61907 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5742	- (01-409)	(B)(S1) (S23)

V2500-ENG-71-0067



SERVICE BULLETIN

TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5743	JM44LC39H107RG (01-417)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5743	- (01-417)	(B)(S1) (S21)
TA025074-02 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5764	JM44LC39H101RG (01-425)	(A)(B) (S1)(S24)
AS61932 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5764	- (01-425)	(B)(S1) (S24)
TA025074-02 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5763	JM44LC39H101RG (01-433)	(A)(B) (S1)(S24)
AS61932 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5763	- (01-433)	(B)(S1) (S24)
TA025074-02 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5765	JM44LC39H105RG (01-441)	(A)(B) (S1)(S24)
AS61932 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5765	- (01-441)	(B)(S1) (S24)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5772	JM44LC39H106RG (01-449)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5772	- (01-449)	(B)(S1) (S21)
TA025074-07 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5773	JM44LC39H106RG (01-457)	(A)(B) (S1)(S21)
AS61905 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5773	- (01-457)	(B)(S1) (S21)
TA025074-16 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5779	JM44LC30H113RG (01-465)	(A)(B) (S1)(S13)
AS61914 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5779	- (01-465)	(B)(S1) (S13)
TA025074-16 (71-52-43)	1	Clamp, Loop Style, Cushion, CP5780	JM44LC39H113RG (01-473)	(A)(B) (S1)(S13)
AS61914 (71-52-43)	Ref	Clamp, Loop Style, Cushion, CP5780	- (01-473)	(B)(S1) (S13)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0870	JM44LC39H103RG (01-252)	(A)(B) (S1)(S8)

Printed in Great Britain

V2500-ENG-71-0067




SERVICE BULLETIN

Printed in Great Britain

AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0870	- (01-252)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0871	JM44LC39H103RG (01-260)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0871	- (01-260)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0872	JM44LC39H103RG (01-268)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0872	- (01-268)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0873	JM44LC39H103RG (01-275)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0873	- (01-275)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0873	JM44LC30H103RG (01-276)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0873	- (01-276)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0874	JM44LC39H103RG (01-283)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0874	- (01-283)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0874	JM44LC39H103RG (01-284)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0874	- (01-284)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0875	JM44LC39H103RG (01-291)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0875	- (01-252)	(B)(S1) (S8)
TA025074-03 (77-32-15)	1	Clamp, Loop Style, Cushion, CP0875	JM44LC39H103RG (01-292)	(A)(B) (S1)(S8)
AS61933 (77-32-15)	Ref	Clamp, Loop Style, Cushion, CP0875	- (01-292)	(B)(S1) (S8)

V2500-ENG-71-0067

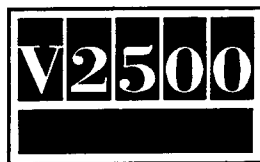


SERVICE BULLETIN

TA025074-02 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0876	JM44LC39H103RG (01-113)	(A)(B) (S1)(S24)
AS61932 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0876	- (01-113)	(B)(S1) (S24)
TA025074-02 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0877	JM44LC39H103RG (01-121)	(A)(B) (S1)(S24)
AS61932 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0877	- (01-121)	(B)(S1) (S24)
TA025074-02 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0878	JM44LC39H103RG (01-129)	(A)(B) (S1)(S24)
AS61932 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0878	- (01-129)	(B)(S1) (S24)
TA025074-02 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0880	JM44LC39H103RG (01-137)	(A)(B) (S1)(S24)
AS61932 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0880	- (01-137)	(B)(S1) (S24)
TA025074-02 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0876	JM44LC39H103RG (02-113)	(A)(B) (S1)(S24)
AS61932 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0876	- (02-113)	(B)(S1) (S24)
TA025074-02 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0877	JM44LC30H103RG (02-121)	(A)(B) (S1)(S24)
AS61933 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0877	- (02-121)	(B)(S1) (S24)
TA025074-02 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0879	JM44LC39H103RG (02-129)	(A)(B) (S1)(S24)
AS61932 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0879	- (02-129)	(B)(S1) (S24)
TA025074-10 (77-32-43)	1	Clamp, Loop Style, Cushion, CP0891	JM44LC39H107RG (05-104)	(A)(B) (S1)(S4)
AS61908 (77-32-43)	Ref	Clamp, Loop Style, Cushion, CP0891	- (05-104)	(B)(S1) (S4)

Printed in Great Britain

V2500-ENG-71-0067

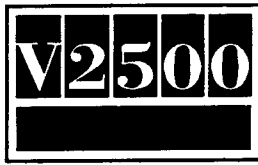H. Instruction/Dispositions Code Statements

- (A) Old Part will be discontinued.
(B) New part is currently available for sale.
(S1) Old and new parts are freely and fully interchangeable both physically and functionally.
(S2) New parts coded (S2) are alternative to new parts coded (S2).
(S3) New parts coded (S3) are alternative to new parts coded (S3).
(S4) New parts coded (S4) are alternative to new parts coded (S4).
(S5) New parts coded (S5) are alternative to new parts coded (S5).
(S6) New parts coded (S6) are alternative to new parts coded (S6).
(S7) New parts coded (S7) are alternative to new parts coded (S7).
(S8) New parts coded (S8) are alternative to new parts coded (S8).
(S9) New parts coded (S9) are alternative to new parts coded (S9).
(S10) New parts coded (S10) are alternative to new parts coded (S10).
(S11) New parts coded (S11) are alternative to new parts coded (S11).
(S12) New parts coded (S12) are alternative to new parts coded (S12).
(S13) New parts coded (S13) are alternative to new parts coded (S13).
(S14) New parts coded (S14) are alternative to new parts coded (S14).
(S15) New parts coded (S15) are alternative to new parts coded (S15).
(S16) New parts coded (S16) are alternative to new parts coded (S16).
(S17) New parts coded (S17) are alternative to new parts coded (S17).
(S18) New parts coded (S18) are alternative to new parts coded (S18).
(S19) New parts coded (S19) are alternative to new parts coded (S19).
(S20) New parts coded (S20) are alternative to new parts coded (S20).
(S21) New parts coded (S21) are alternative to new parts coded (S21).
(S22) New parts coded (S22) are alternative to new parts coded (S22).
(S23) New parts coded (S23) are alternative to new parts coded (S23).
(S24) New parts coded (S24) are alternative to new parts coded (S24).

NOTE: The estimated 1994 unit prices shown are provided for planning purposes only and do not constitute a firm quotation. Consult the IAE Price Catalog or contact IAE's Spare Parts Sales Department for information concerning firm prices.

